 
The Pilot's Pen – Night Writer – User Manual

Basic Operation

The Night Writer uses a 4-way top cap switch. Pressing the top cap performs the following functions (remove protective cover):

- 1. Extends ink (Light is off)
- 2. Retracts ink (Light is off)
- 3. Extends ink and turns Light ON
- 4. Retracts ink (turns Light Off)

Parts Diagram

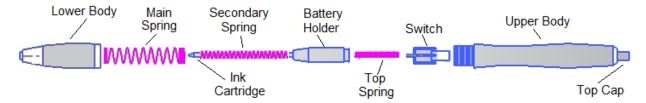

Replacing Ink

- Twist to unscrew and separate the Lower Pen Body from the Upper Pen Body.
- Carefully and slowly separate the two halves
- Note that the ink cartridge is held inside the lower portion of the Battery Holder and rests inside 2 Springs (Main Spring and Secondary Spring)
- Pull the ink cartridge out of the Battery Holder and replace it with a new cartridge
- Ensure the new ink cartridge is placed inside the Secondary Spring and the Main Spring
- Put the Battery Holder back inside the Upper Body note that the Battery Holder is notched and may need to be rotated to fit back inside the Upper Body
- Carefully push the Upper Body and Lower Body back together and screw the halves back together

Replacing Batteries



- Similar to replacing ink (detailed above), separate the Lower Pen Body from the Upper Pen Body
- Remove the Battery Holder and ink cartridge
- Twist and Pull the top of the Battery Holder off. Inside is a small Battery Pack. Carefully remove it
- Replace the Battery Pack with a replacement
- If replacing the individual batteries, note the Polarity of each battery (the + faces the Top)
- The replacement battery size is **AG4** (see alternative model numbers below)
- Re-assembly is the reverse process (see Replacing Ink for details)

Specifications:

Battery Type: AG4 (4 required); Compatible batteries: Watch battery size 376, SR626W, L626, MA, SR66 and 619

Battery Life: About 20 hours; Ink Cartridge: Medium point, Refills available

Need parts, accessories or assistance? Contact us at Service@BrittaProducts.com. Visit us at www.ThePilotsPen.com